



MKV TOYOTA SUPRA

ANTI-WIND BUFFETING KIT

Introduction

The goal of AMS Performance is to provide the highest quality, best performing products available. By utilizing research and development, and rigorous testing programs AMS Performance will never compromise the quality or performance of our products. In addition, AMS Performance will only provide the finest customer service offering only parts and advice that are in the best interests of the customer. AMS Performance was built on a foundation of integrity. This is who we are; this is what you can count on.

A vehicle modified by the use of performance parts may not meet the legal requirements for use on public roads. Federal and state laws prohibit the removal, modification, or rendering inoperative of any part or element of design affecting emissions or safety on motor vehicles used for transporting persons or property on public streets or highways. Use or installation of performance parts may adversely affect the drivability and reliability of your vehicle, and may also affect or eliminate your insurance coverage, factory warranty, and/or new OEM part warranty. Performance parts are sold as-is without any warranty of any type. There is no warranty stated or implied due to the stresses placed on your vehicle by performance parts and our inability to monitor their use, tuning, or modification.

These instructions are provided as a guide only as there are many variables that cannot be accounted for concerning your particular vehicle, including but not limited to model year differences, model differences, the presence of non-OEM parts, and modifications that may already be or were previously installed. A basic knowledge of automotive parts and systems is helpful but a better understanding of the parts and systems on your particular vehicle may be required.

If you have any questions or issues at any time during the installation of your AMS Performance product(s) please call us for technical assistance. The AMS Performance tech line can be reached during business hours at 847-709-0530 for AMS Performance products only.

Table of Contents


02 Introduction

04 Unpacking

05 Test Fit

07 Install

1) Unpackage your AMS MKV Supra Anti-Buffering Kit.

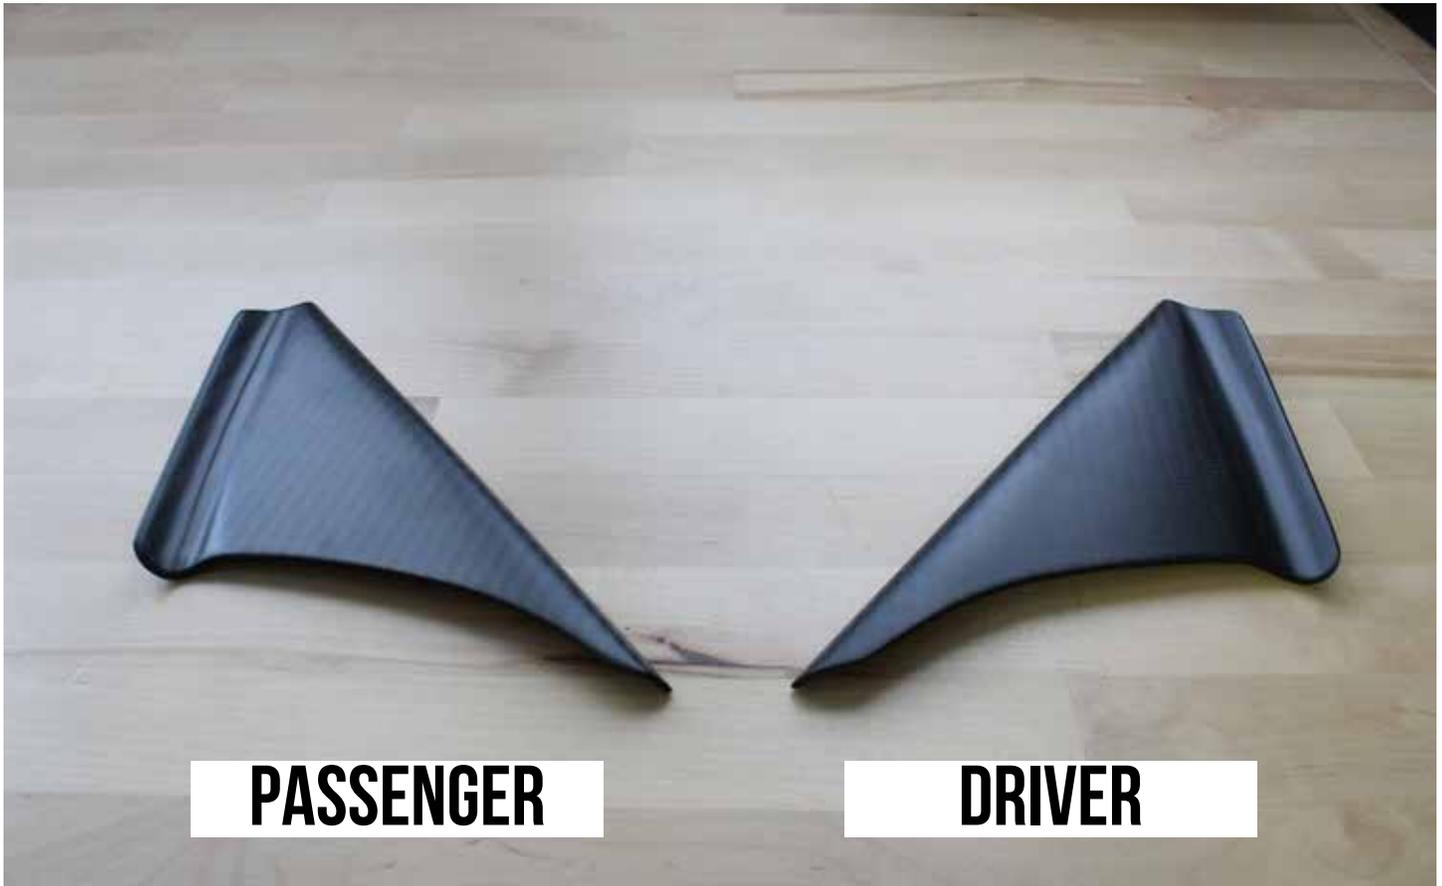

2) Test fit the drivers wind deflector on the mirror base to get an idea where it will sit.



3) Clean off the mirror base with isopropyl alcohol and let dry. It is very important that the surface of the mirror is clean before installing the plates.

4) Make sure your hands are clean before handling the double-sided tape. Peel back a small amount of the adhesive backing and crease it as shown below.



5) Lightly position the wind deflector on the mirror base keeping the adhesive backing accessible to grab from the edges.



6) Once in position, lightly hold the mirror plate with one hand and pull the rest of the backing off with the other. Apply a reasonable amount of pressure to permanently adhere the wind deflector to the mirror base.

7) Repeat steps 2-6 on the passenger side.

8) Enjoy no wind buffeting!